

SIEMENS

POWERMOBIL

SP

System Manual

Installation Instructions

Unpacking the Main Unit

© Siemens AG 1999

The reproduction, transmission or use of this document or its contents is not permitted without express written authority. Offenders will be liable for damages. All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

Register 3

Print No.: SPR2-240.812.01.01.02

Replaces: n.a.

English

Doc. Gen. Date: 11.99

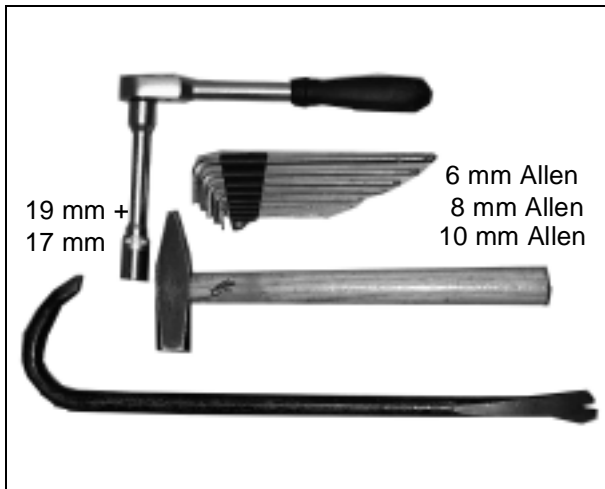


Fig. 1
- Required tools.

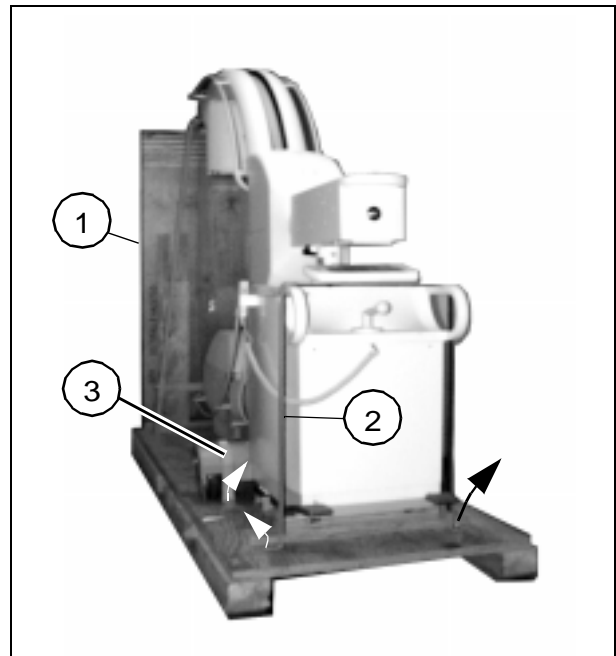


Fig. 2

- Cut through attachment bands for unloading ramp.
- Remove unloading ramp (1/Fig. 2) from pallet.
- Unscrew retainer bracket (2/Fig. 2) and remove.
- Unscrew retainer bracket (3/Fig. 2) on both sides and remove.

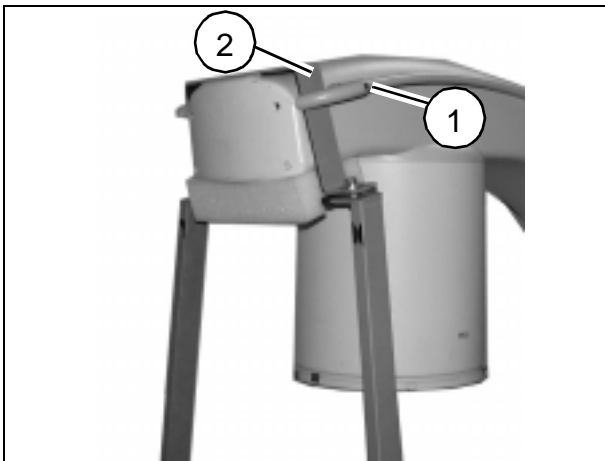


Fig. 3

- Loosen attachment screws for reeling (1/Fig. 3).
- Unscrew transport bracket (2/Fig. 3) and remove.
- Tighten down attachment screws for reeling (1/Fig. 3) again on both sides.

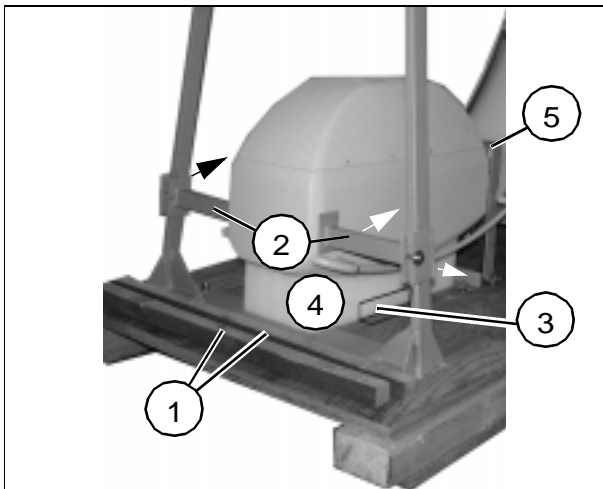


Fig. 4

- Remove the two wooden cross pieces (1/Fig. 4).
- Unscrew both retainer brackets (2/Fig. 4) and remove.
- Unscrew retainer brackets (3/Fig. 4) on both sides and remove.
- Push supporting block (4/Fig. 4) out sideways.
- Unscrew bracket (5/Fig. 4) and remove.

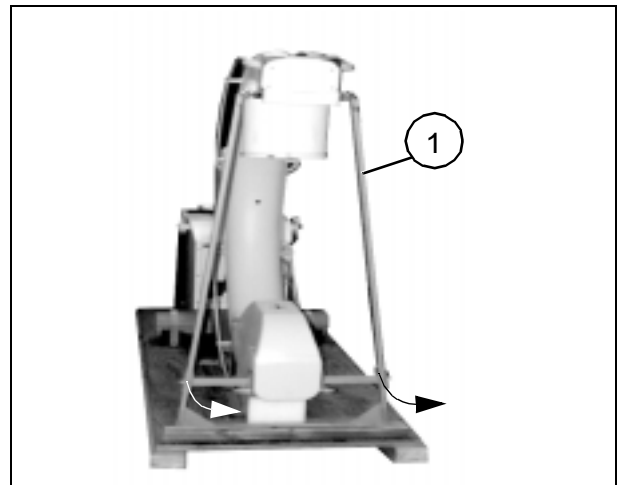


Fig. 5

- Loosen support rods (1/Fig. 5) and remove.

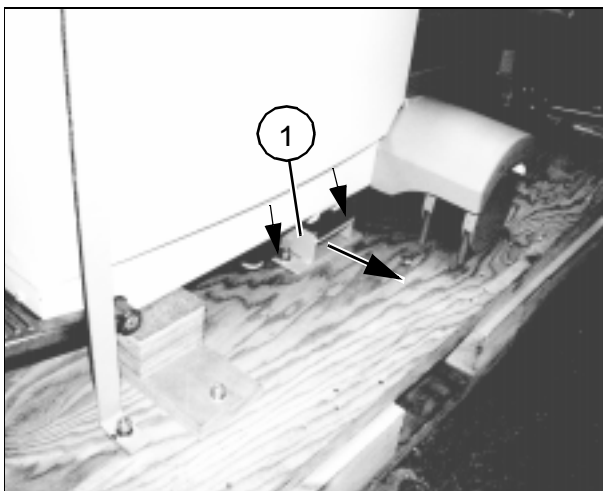


Fig. 6

- Unscrew supporting blocks (1/Fig. 6) on both sides and remove.

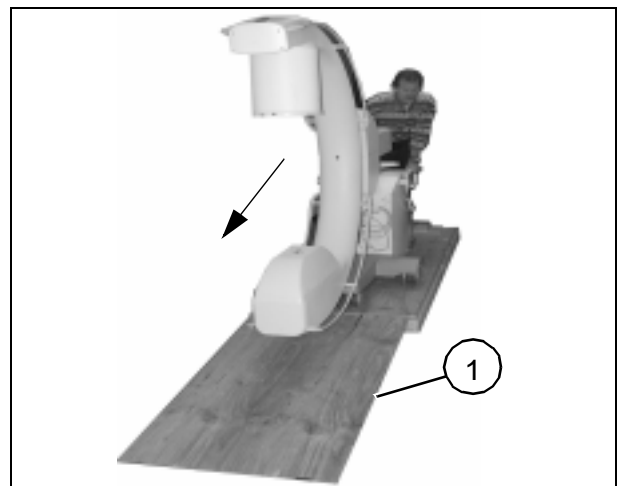


Fig. 7

- Firmly attach unloading ramp (1/Fig. 7) with nails (accessory pack mounted at the ramp) to pallet.
- Release foot brake.
- Move system from pallet in direction of arrow.

Concluding Work

ATTENTION

In order to avoid damage caused by high relative humidity, do not put the POWERMOBIL into operation immediately. In extreme cases, it can take up to 24 hours before the POWERMOBIL should be turned on (e.g. transport temperature -20° Celsius and very high humidity in the customer's operating rooms).

- The monitor trolley should be unpacked if this has not been done.
- Prior to start-up, let the system adapt to its environment.
- Perform the system start-up according to the instructions outlined in the POWERMOBIL Start-up manual.

TD SD 24/ Arnold